

## MECHANISMS - Duomatic

### DUOMATIC

#### LEVER A - Seat height adjustment

- To increase seat height, lift Lever A when not seated.
- To lower seat height lift Lever A when seated.

#### LEVER B - Seat Angle Adjustment

- Lift to adjust seat angle while seated.
- Push down when desired seat angle is achieved.

#### LEVER C - Back Angle Adjustment

- Lift to adjust back angle while seated.
- Push lever down when desired back angle is achieved.

#### HAND WHEEL D - To Raise or Lower Back Support

- Turn hand wheel in an anti-clockwise direction.
- Raise or lower back to desired position.
- Turn hand wheel in clockwise direction to lock.



### ARTEIL

Office and Healthcare Seating Specialists

Unit 2-5  
95 Garling St  
O'Connor WA 6163

Tel: (08) 9337 8399

Fax: (08) 9314 1553

Email: [sales@arteil.com.au](mailto:sales@arteil.com.au)

[www.arteil.com.au](http://www.arteil.com.au)