

## MECHANISMS - Cornell Duomatic

### CORNALL DUOMATIC

#### LEVER A - Seat Height Adjustment

- To increase seat height, lift Lever A when not seated.
- To lower seat height lift Lever A when seated.

#### LEVER B - Seat Angle Adjustment

- Lift to adjust seat angle while seated.
- Push down when desired seat angle is achieved

#### LEVER C - Back Angle Adjustment ( located on the right hand side as seated)

- Lift to adjust back angle while seated.
- Push lever down when desired back angle is achieved



**ARTEIL**  
Office and Healthcare Seating Specialists

Unit 2-5  
95 Garling St  
O'Connor WA 6163

Tel: (08) 9337 8399  
Fax: (08) 9314 1553

Email: [sales@arteil.com.au](mailto:sales@arteil.com.au)  
[www.arteil.com.au](http://www.arteil.com.au)