


HANDSET INSTRUCTIONS FOR ELEVATE BACK TO BACK DESK

1. Initializing system -- Initialize the system when abnormal status occurs or "RST" display on handset. Press "DOWN KEY" until there is a beep sound.

2. UP KEY/DOWN KEY -- Control desk go up and down.


3. MEMORY POSITION SETTING -- Press "SETTING KEY" when it operates to your preferred position, then "S - " will display. Press number key(1-4) when "-" flash. Then the desk will run to the appointed position by number key directly.

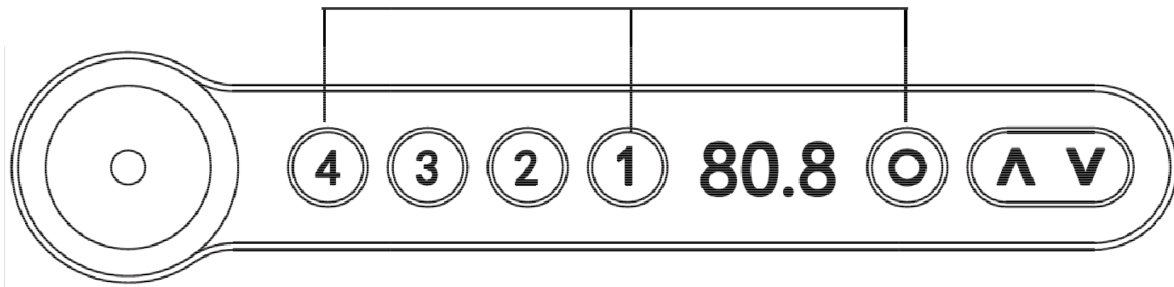

4. HIGHEST / LOWEST POSITION SETTING -- Press "UP KEY" & "DOWN KEY" at the same time for 5 seconds at chosen position height.

5. LOCK & UNLOCK SETTING -- Press "SETTING KEY" & "UP KEY" at the same time for 5 seconds, "LOC" display means you can not operate the desk any more. Press "SETTING KEY" & "DOWN KEY" at the same time for 5 seconds until "LOC" change to normal figures. UNLOCK function takes effect.

6. RESETTING THE BASE -- Press " UP KEY" & "DOWN KEY" at the same time for 10 seconds until there is a beep sound.

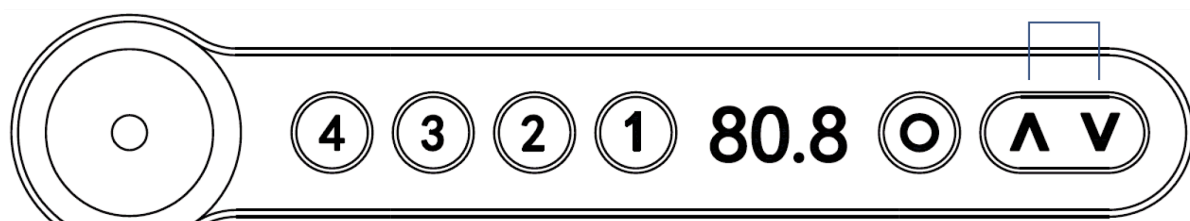

ERROR CODE & SOLUTION FOR ELEVATE BACK TO BACK DESKS

ERROR CODE	REASON	SOLUTION
E01	Main power voltage over 45V	Check the main power
E05	Anti-collision function protection	Release key and re-operate
E08	Unblanced	Initializing system
HOT	Over-heat protection	Wait 18 minutes or cut down power till handset power off completely
E11	Motor line 1 is not connected	Check motor line 1
E21	Motor line 2 is not connected	Check motor line 2
E18	Over-load protection for motor 1	Reduce the load of motor 1
E28	Over-load protection for motor 2	Reduce the load of motor 2

SYSTEM PROTECTION

- 1. Overload protection:** The desk will stop immediately when the load exceed 80kg. Just remove some load on the top then it will be back to normal.
- 2. Overheat protection:** "OH" will display after continuous operation for 2 minutes (about 3 round trips), please stop to operate. It will be normal after 18 minutes.
- 3. Motor abnormal protection:** Error code will display when any abnormal operation. Please refer to solutions above for basic error code display. If not, please consult the after-sale service or sales person for solution.